

HP StorageWorks

MSL6000 series pass-through mechanism reference guide



231908-005

Part number: 231908-005
Fifth edition: March 2005



Legal and notice information

© Copyright 2003-2005 Hewlett-Packard Development Company, L.P.

Hewlett-Packard Company makes no warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Hewlett-Packard shall not be liable for errors contained herein or for incidental or consequential damages in connection with the furnishing, performance, or use of this material.

This document contains proprietary information, which is protected by copyright. No part of this document may be photocopied, reproduced, or translated into another language without the prior written consent of Hewlett-Packard. The information is provided "as is" without warranty of any kind and is subject to change without notice. The only warranties for HP products and services are set forth in the express warranty statements accompanying such products and services. Nothing herein should be construed as constituting an additional warranty. HP shall not be liable for technical or editorial errors or omissions contained herein.

HP, Compaq, and StorageWorks are trademarks of Hewlett-Packard Company in the U.S. and/or other countries.

Compaq Computer Corporation is a wholly-owned subsidiary of Hewlett-Packard Company.

Microsoft®, Windows®, Windows NT®, and Windows XP® are U.S. registered trademarks of Microsoft Corporation.

Printed in the USA

MSL6000 series pass-through mechanism reference guide

Part number: 231908-005

Fifth edition: March 2005

Contents

About this guide	5
Related documentation	5
Document conventions and symbols	5
HP technical support	6
HP-authorized reseller	6
Helpful web sites	7
1 Introduction	9
Preparing for the PTM Installation	9
PTM Components	9
PTM Required Tools	10
2 Installing the PTM	11
Planning the Installation	11
Determining the Type and Number of Extensions	12
5U Model as the Master Unit	12
10U Model as the Master Unit	12
Positioning the Libraries	12
Installing the LAN Hub	13
PTM Base Unit Description	16
Installing a Single PTM Base Unit (5U Models)	16
Preparing to Install a PTM (10U Models)	20
Adding Extensions to a PTM Base Unit	23
Installing a Longer Belt to an Extended PTM	28
Installing the Extended PTM	31
Cabling the PTM and LAN Hub	31
Multi-Unit Library Configuration (Single Master and Slave)	32
3 Configuring the PTM	35
Preparing for Configuration	35
Configuring the Master Library	35
Configuring the Slave Libraries	39
Verifying the Configuration	39
Converting a Multi-Unit Library Configuration to Standalone Configuration	40
Verifying the Firmware Level	40
Updating Firmware	41
Checking the Firmware Revision	41
Using the Remote Management Interface	41
Using HP StorageWorks Library & Tape Tools	43
Using a Serial Connection	43
Firmware Flashing Procedure	43

4 Electrostatic Discharge	45
Grounding Methods	45
Index	47
Figures	
1 Installing the LAN hub into a standard 7000/9000/10000 rack enclosure	13
2 Installing the LAN hub into a dual RETMA 9000/10000 rack enclosure.	14
3 Installing the LAN hub into an H9A rack enclosure.	14
4 Installing the LAN hub into a system/e rack	15
5 PTM base unit	16
6 5U library installation (10000 rack enclosure shown).	17
7 Accessing drive bay 1	18
8 Removing the PTM cover plate.	19
9 Installing the PTM base unit.	20
10 Library installation, 10U models (9000 rack enclosure shown)	21
11 Accessing drive bays 1 and 3 (10U models).	22
12 Removing a PTM cover plate (10U models).	23
13 Removing the bottom plate from the PTM base unit	24
14 Media elevator car location	25
15 Belt block bracket access cutout.	25
16 Removing the belt tensioner ramp and idler pulley	26
17 Mounting a 5U or 10U extension	27
18 Installing tie bars	27
19 Tensioner ramp/idler pulley zero point.	28
20 Installing the timing belt on the extension	29
21 Installing the timing belt	29
22 Timing belt at the belt block	30
23 Installing the bottom plate	30
24 10U multi-unit library configuration (single master and slave)	32
25 Library home screen (MSL6000 shown)	36
26 Menu screen	36
27 Module Configuration select screen	37
28 Module Configuration screen	38
29 Module Configuration confirmation screen	38
30 Cartridge Cycle diagnostic screen	40
31 Updating firmware using the Remote Management Interface	42
32 Copying firmware using the Remote Management Interface	42
33 Confirming the Flash operation using the Remote Management Interface	42

Tables

1 Document conventions	5
----------------------------------	---

About this guide

This guide provides information about:

- Installing the PTM
- Configuring the PTM

Related documentation

In addition to this guide, please refer to other documents for this product:

- HP StorageWorks MSL6000 Series Tape Library User Guide
- HP StorageWorks Network Storage Router User Guide

These and other HP documents can be found on an HP web site: <http://www.docs.hp.com>.

Document conventions and symbols

Table 1 Document conventions

Convention	Element
Medium blue text: Figure 1	Cross-reference links and e-mail addresses
Medium blue, underlined text (http://www.hp.com)	Web site addresses
Bold font	<ul style="list-style-type: none">• Key names• Text typed into a GUI element, such as into a box• GUI elements that are clicked or selected, such as menu and list items, buttons, and check boxes
<i>Italics font</i>	Text emphasis
Monospace font	<ul style="list-style-type: none">• File and directory names• System output• Code• Text typed at the command-line
<i>Monospace, italic font</i>	<ul style="list-style-type: none">• Code variables• Command-line variables
Monospace, bold font	Emphasis of file and directory names, system output, code, and text typed at the command-line



WARNING! Indicates that failure to follow directions could result in bodily harm or death.



CAUTION: Indicates that failure to follow directions could result in damage to equipment or data.



IMPORTANT: Provides clarifying information or specific instructions.



NOTE: Provides additional information.



TIP: Provides helpful hints and shortcuts.

HP technical support

Telephone numbers for worldwide technical support are listed on the HP web site:

<http://www.hp.com/support/>.

Collect the following information before calling:

- Technical support registration number (if applicable)
- Product serial numbers
- Product model names and numbers
- Applicable error messages
- Operating system type and revision level
- Detailed, specific questions

For continuous quality improvement, calls may be recorded or monitored.

HP strongly recommends that customers sign-up online using the Subscriber's choice web site at

<http://www.hp.com/go/e-updates>.

- Subscribing to this service provides you with e-mail updates on the latest product enhancements, newest versions of drivers, and firmware documentation updates as well as instant access to numerous other product resources.
- After signing-up, you can quickly locate your products by selecting **Business support**, and then **Storage** under Product Category.

HP-authorized reseller

For the name of your nearest HP-authorized reseller:

- In the United States, call 1-800-345-1518.
- Elsewhere, visit <http://www.hp.com> and click **Contact HP** to find locations and telephone numbers.

Helpful web sites

For product information, see the following web sites:

- <http://www.hp.com>
- <http://www.hp.com/go/storage>
- <http://www.hp.com/support/>
- <http://www.docs.hp.com>
- <http://www.hp.com/go/ebs>

1 Introduction

The HP StorageWorks Pass-Through Mechanism (PTM) enables the transfer of tape cartridges between HP StorageWorks MSL6000 Series tape libraries. A single PTM system can be used to create a multi-unit tape library configuration by connecting:

- Up to eight two-drive libraries
- Up to four four-drive libraries
- A combination of two- and four-drive libraries equivalent to a 40U height



NOTE: See “[Planning the Installation](#)” on page 11 for specific configuration details.



NOTE: All MSL Series libraries in a multi-unit library configuration must use the same drive types. Check with your application software vendor to manage partitioning by tape technology if you want to mix drive types in a multi-unit library configuration.

Mixed media is not supported on libraries with firmware levels of 4.04 or earlier.

The PTM installation procedure consists of the following steps:

- Preparing for the PTM installation
- Installing the PTM
- Cabling the PTM
- Configuring the PTM



NOTE: An MSL Series PTM is not compatible with either a TL series or an SSL series PTM.

Preparing for the PTM Installation

Before beginning the installation procedure:

1. Using the packing slip, verify the components that came with the PTM Upgrade Kit.
2. Make sure that you have the required tools (see “[PTM Required Tools](#)” on page 10).
3. Make sure the library is functional.
4. Make sure that you are using the proper version of firmware. See “[Verifying the Firmware Level](#)” on page 40.

PTM Components

The following components typically ship with a PTM kit:

- PTM (base unit)
- LAN hub and bracket

- Primary motor cable
- AC power cord (U.S. only -- country-specific cords are not provided)
- Ethernet cables

The following components ship with an Extender Upgrade Kit:

- One ethernet cable
- 5U or 10U extension
- Attachment hardware

PTM Required Tools

The following tools are required to perform a PTM installation:

- #2 Phillips screwdriver (stubby or right-angle)
- #1 Phillips screwdriver
- Flat-blade screwdriver
- Large paper clip
- Diagonal cutting pliers

2 Installing the PTM

This chapter describes how to install a Pass-Through Mechanism (PTM) for an HP StorageWorks MSL6000 Series tape library. Sections in this chapter include:

- [Planning the Installation](#), page 11
- [Positioning the Libraries](#), page 12
- [Installing the LAN Hub](#), page 13
- [PTM Base Unit Description](#), page 16
- [Installing a Single PTM Base Unit \(5U Models\)](#), page 16
- [Preparing to Install a PTM \(10U Models\)](#), page 20
- [Adding Extensions to a PTM Base Unit](#), page 23
- [Installing a Longer Belt to an Extended PTM](#), page 28
- [Installing the Extended PTM](#), page 31
- [Cabling the PTM and LAN Hub](#), page 31

Planning the Installation



NOTE: Two unique extension sizes are available: 5 Unit (5U) and 10 Unit (10U). Two-drive models such as the MSL6030/6026 are designated as 5U. Four-drive models such as the MSL6060/6052 are designated as 10U.

A PTM can be mounted into the following rack enclosures:

- Compaq 7000/9000/10000 Series
- AlphaServer H9A
- HP rack system/e

Two PTM variations are available:

- A factory-assembled PTM (base unit) that can be used to connect two 5U libraries (one master and one slave).
- The PTM base unit plus extensions with a combined length equal to the number of adjacent MSL Series libraries installed in a rack enclosure.
 - For 5U libraries: one master and up to seven additional slaves.
 - For 10U libraries: one master and up to three additional slaves.
 - Any combination of MSL Series libraries not to exceed 40 U.

If PTM extensions are required, assemble the entire PTM system before installing it in a multi-unit library configuration.



CAUTION: Do not apply power to any library. Attempting to connect or disconnect a PTM to a library that has power applied can damage the library and the PTM base unit PCB.

Determining the Type and Number of Extensions

The PTM base unit measures 10U. Use the following guidelines to add extensions.



NOTE: You cannot add two 5U slaves using a 10U extension kit due to 10-BaseT cable requirements in the kit.

5U Model as the Master Unit

- If you are adding one 5U as a slave, no additional extensions are required.
- If you are adding one 10U as a slave, an additional 5U extension is required.
- Additional 5U slaves require the addition of a 5U extension kit for each unit after the first.
- Additional 10U slaves require the addition of a 10U extension kit for each unit after the first.

10U Model as the Master Unit

- Additional 5U slaves require the addition of a 5U extension kit for each unit.
- Additional 10U slaves require the addition of a 10U extension kit for each unit.

Positioning the Libraries

The PTM must be attached to the top two libraries in a multi-unit library configuration. Additional slave libraries can be installed anywhere below the first two libraries, in any order.



NOTE: Additional libraries may be installed above the multi-unit library configuration.

The top library in the multi-library configuration (master) senses the position of each library during initialization at power-up.



NOTE: All MSL Series libraries in a multi-unit library configuration must use the same drive types. Check with your application software vendor to manage partitioning by tape technology if you want to mix drive types in a multi-unit library configuration.

Mixed media is not supported on libraries with firmware levels of 4.04 or earlier.

Installing the LAN Hub

An eight-port LAN hub is included in the PTM Upgrade Kit. It comes pre-assembled in its own bracket for installation at the side of a rack enclosure. The LAN hub is used to connect each installed library to a WAN via the 10-BaseT connector on the library controller board for coordinating PTM operation and communication.

To install the LAN hub:

1. Install cage nuts/clip nuts as indicated in [Figure 1](#) through [Figure 4](#).
2. Carefully install the LAN hub bracket.

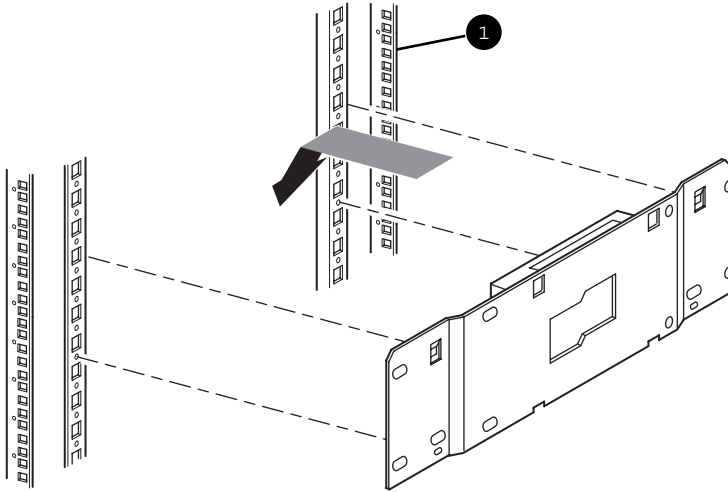


Figure 1 Installing the LAN hub into a standard 7000/9000/10000 rack enclosure

❶ Front of rack enclosure

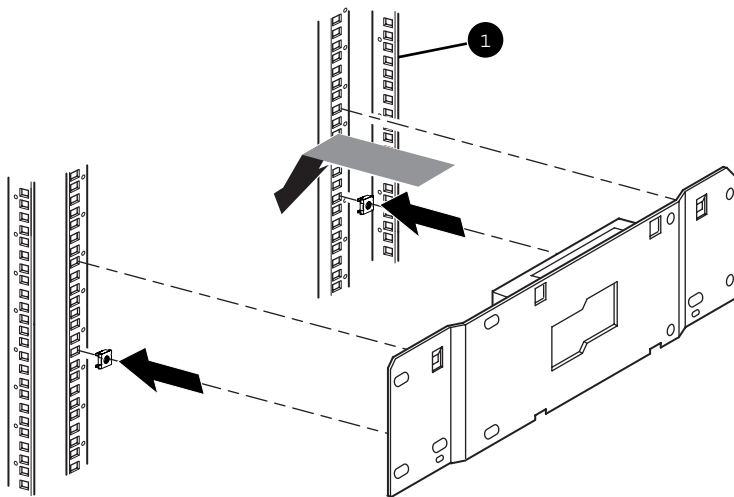


Figure 2 Installing the LAN hub into a dual RETMA 9000/10000 rack enclosure

❶ Front of rack enclosure

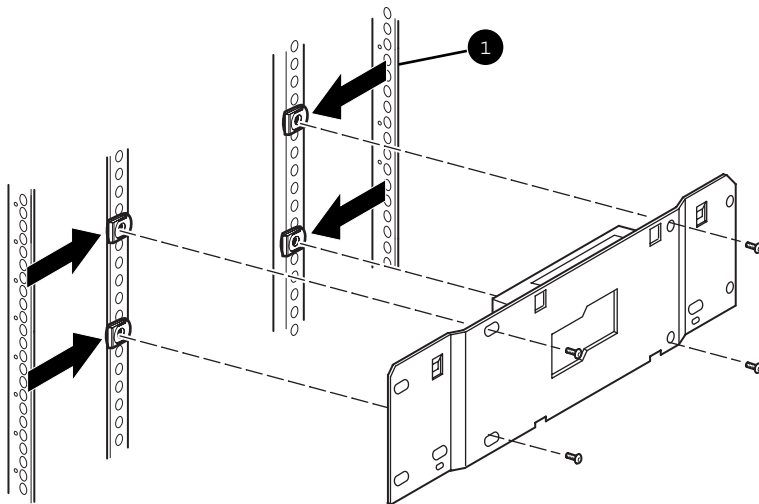


Figure 3 Installing the LAN hub into an H9A rack enclosure

❶ Front of rack enclosure

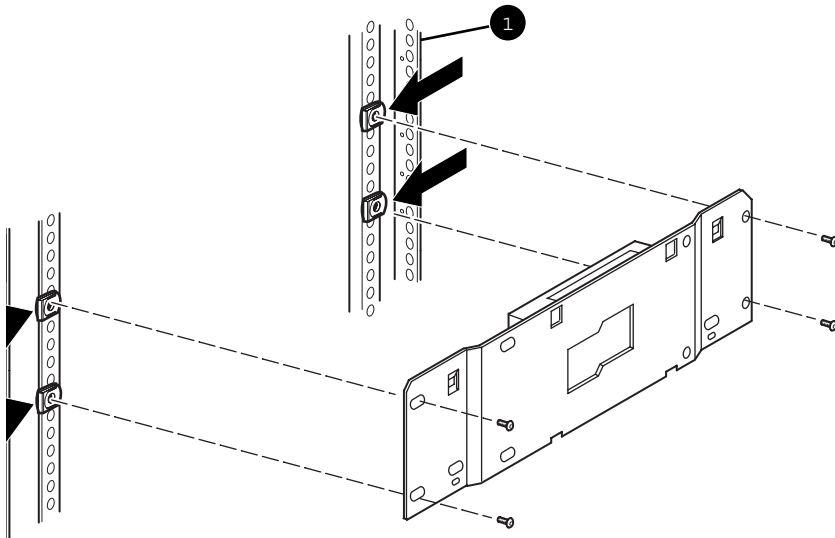



Figure 4 Installing the LAN hub into a system/e rack

❶ Front of rack enclosure

3. Connect the AC power cable to the LAN hub and to the rack enclosure AC power outlet. Do not turn the LAN hub on at this time.
4. Attach the 10-BaseT cables to the LAN hub for each library. See ["Cabling the PTM and LAN Hub"](#) on page 31 for connecting instructions.
5. Attach a network cable to the LAN hub. See the section on ["Cabling the PTM and LAN Hub"](#) on page 31 for instructions.

PTM Base Unit Description

The PTM base unit comes factory assembled and contains the following components (see [Figure 5](#)).

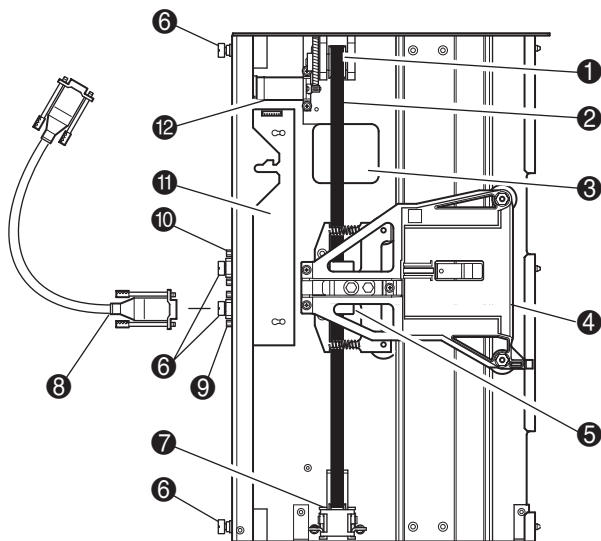

- | | |
|---|--|
| 1 Drive Motor Pulley | 7 Belt Tensioner Ramp and Idler Pulley |
| 2 Drive Belt | 8 Primary Motor Cable |
| 3 Belt Block Bracket Access Cutout | 9 Primary Motor Cable Connector |
| 4 Media Elevator Car | 10 Reserved for future use |
| 5 Belt Block and Brackets | 11 Printed Circuit Board (PCB), Motor Controller |
| 6 Thumbscrews (Top, Middle, and Bottom) | 12 Drive Motor |

Figure 5 PTM base unit

Installing a Single PTM Base Unit (5U Models)

To install a single PTM base unit:

1. Install two 5U libraries, as shown in [Figure 6](#), following the instructions in the *HP StorageWorks MSL6000 Series Tape Library User Guide*.



NOTE: Each library needs to be pulled out sequentially from the front of the rack enclosure to gain access to the top PTM cover plate screw on a lower library. See [Figure 8](#) for screw locations.

CAUTION: Do not apply power to either library. Attempting to connect or disconnect a PTM base unit to a library that has power applied can damage the library and the PTM base unit PCB.

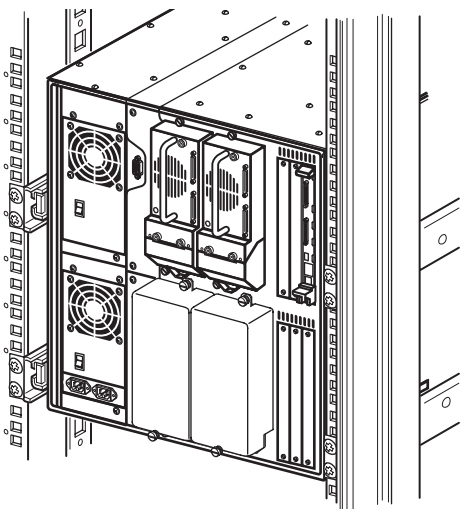


Figure 6 5U library installation (10000 rack enclosure shown)



NOTE: After installing the libraries, secure each one to the rack enclosure using its front bezel thumbscrews.

2. Remove the blank panel or drive shoe assembly 1 from the bay adjacent to the PTM cover plate opening (see [Figure 7](#)).
 - a. Loosen the captive retaining screws at the top and bottom of the blank panel or drive shoe assembly 1.
 - b. Remove the blank panel or pull straight back on the drive shoe assembly 1 handle to unplug it.



NOTE: Some effort might be required to overcome the initial resistance of unplugging the drive shoe assembly from the hot-plug connector. A gentle wiggling motion may aid removal.

- c. Fully disengage drive shoe assembly 1. Continue to slide drive shoe assembly 1 out while supporting it until the tape drive hardware clears the back of the library hot-plug connector.

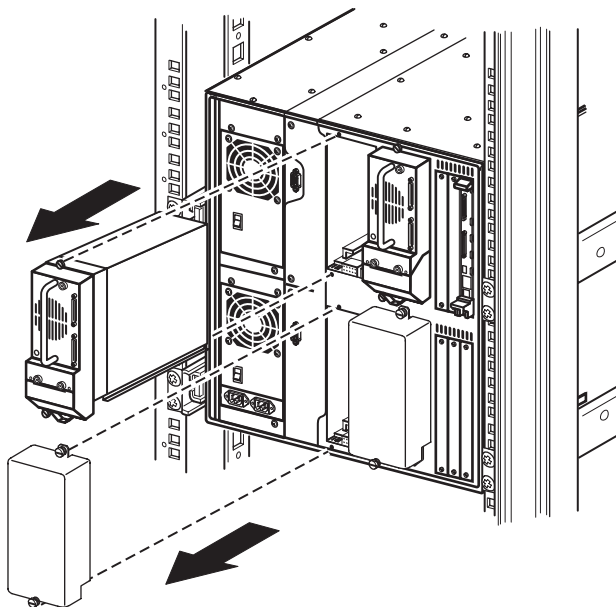


Figure 7 Accessing drive bay 1

3. Remove the PTM cover plate.



NOTE: If the PTM cover plate has not previously been removed, each library needs to be pulled out sequentially from the front of the rack enclosure so you can gain access to the top PTM cover plate screw on a lower library.

- a. Using a #1 Phillips screwdriver, remove the screw securing the cover plate to the top of each library chassis.
- b. Using a stubby or right-angle #2 Phillips screwdriver, remove the screws securing the cover plate to the inside of the drive cage of each library chassis.
- c. Using a #2 Phillips screwdriver, remove the screws that secure the PTM cover plate to the rear of each library chassis (see [Figure 8](#)).



NOTE: Do not discard the PTM cover plate or screws. If the unit ever requires shipping, the PTM cover plate must be reinstalled to prevent in-transit damage.

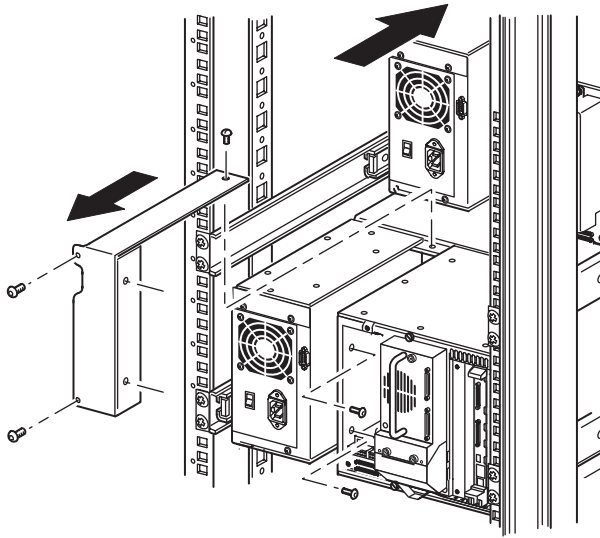


Figure 8 Removing the PTM cover plate

4. Install the PTM base unit (see [Figure 9](#)).

- a.** Hold the handle while supporting the PTM base unit from the bottom.
- b.** Carefully insert the PTM base unit into the top library making sure the top pins are fully engaged.
- c.** Secure the PTM base unit to the top library using the PTM base unit top and top-middle thumbscrews.



NOTE: If the lower pins are difficult to align to the bottom (slave) library, push the slave library slightly forward. Afterwards, engage it by pulling it toward the PTM base unit before tightening the lower thumbscrews.

- d.** Secure the PTM base unit to the bottom library using the PTM base unit bottom-middle and bottom thumbscrews,.



NOTE: If you still cannot align the bottom library to the PTM base unit, slightly loosen the rear rail bracket screws for the bottom library, reposition it, and then secure it to the PTM base unit. Afterwards, re-tighten the rear rail bracket screws.

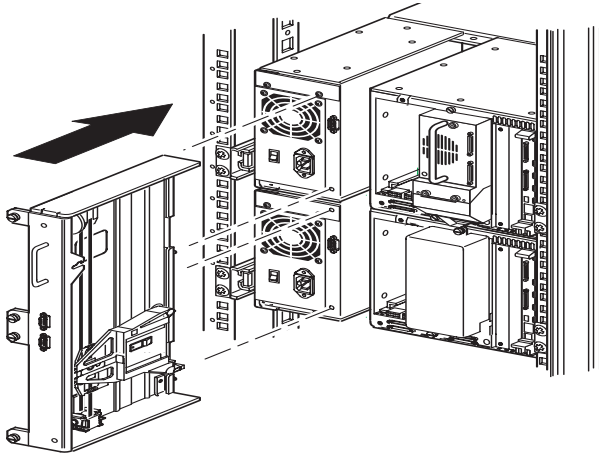


Figure 9 Installing the PTM base unit

5. Connect the PTM base unit following the instructions in ["Cabling the PTM and LAN Hub"](#) on page 31.
6. If required, install any previously removed drive assemblies and covers.
7. If necessary, tighten the thumbscrews at the front of the unit and replace the bezel.

Preparing to Install a PTM (10U Models)

To prepare to install a PTM:



NOTE: A 10U extension must be added to the PTM base unit to connect two 10U libraries. See ["Adding Extensions to a PTM Base Unit"](#) on page 23.

1. Install two 10U libraries as shown in [Figure 10](#) on page 21 following the instructions in the *HP StorageWorks MSL6000 Series Tape Library User Guide*.



NOTE: Each library needs to be pulled out sequentially from the front of the rack enclosure to gain access to the top PTM cover plate screw on a lower library. See [Figure 12](#) on page 23 for screw locations.

CAUTION: Do not apply power to either library. Attempting to connect or disconnect a PTM base unit to a library that has power applied can damage the library and the PTM base unit PCB.

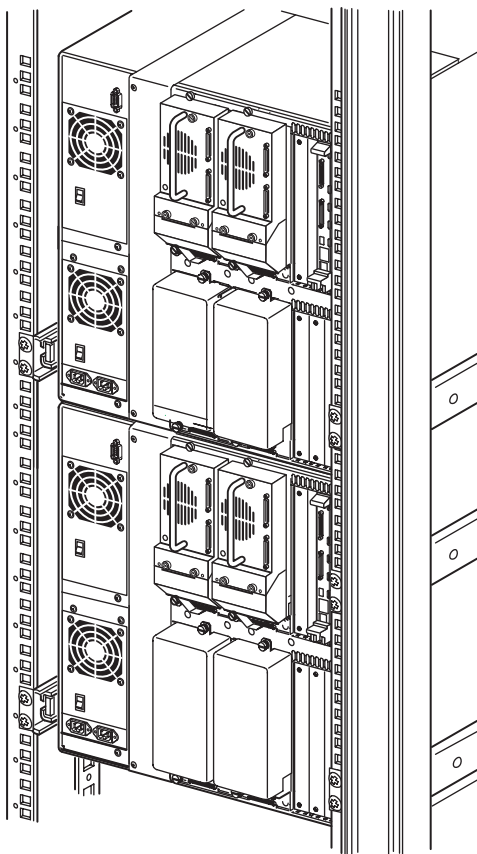


Figure 10 Library installation, 10U models (9000 rack enclosure shown)



NOTE: After installing the libraries, secure each one to the rack enclosure using its front bezel thumbscrews.

2. Remove the blank panels or drive shoe assembly 1 and 3 from the bays adjacent to the PTM cover plate openings of each library (see [Figure 11](#) on page 22).
 - a. Loosen the captive retaining screws at the top and bottom of the blank panels or drive shoe assembly 1 and 3.
 - b. Remove the blank panels or pull straight back on the drive shoe assembly 1 and 3 handles to unplug them.



NOTE: Some effort might be required to overcome the initial resistance of unplugging a drive shoe assembly from a hot-plug connector. A gentle wiggling motion may aid removal.

- c. Fully disengage drive shoe assembly 1 and 3. Continue to slide drive shoe assembly 1 and 3 out while supporting them until the tape drive hardware clears the back of the library hot-plug connectors.

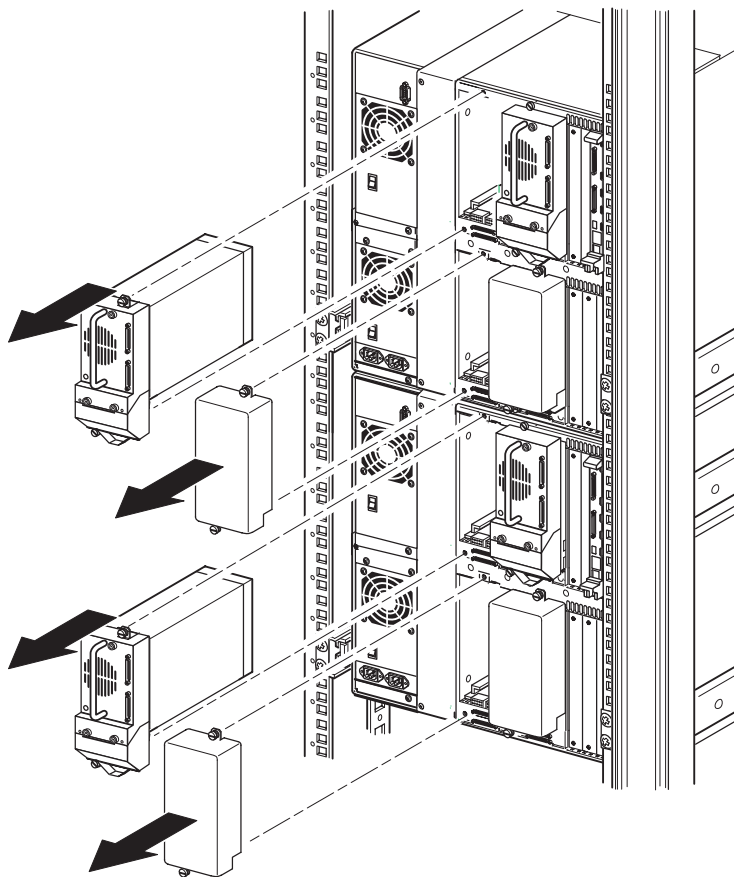


Figure 11 Accessing drive bays 1 and 3 (10U models)

3. Remove the PTM cover plate.



NOTE: If the PTM cover plate has not previously been removed, each library needs to be pulled out sequentially from the front of the rack enclosure so you can gain access to the top PTM cover plate screw on a lower library.

- a. Using a #1 Phillips screwdriver, remove the screw securing the cover plate to the top of each library chassis.

- b. Using a stubby or right-angle #2 Phillips screwdriver, remove the screws securing the cover plate to the inside of the drive cage of each library chassis.
- c. Using a #2 Phillips screwdriver, remove the screws that secure the PTM cover plate to the rear of each library chassis (see [Figure 12](#) on page 23).



NOTE: Do not discard the PTM cover plate or screws. If the unit ever requires shipping, the PTM cover plate must be reinstalled.

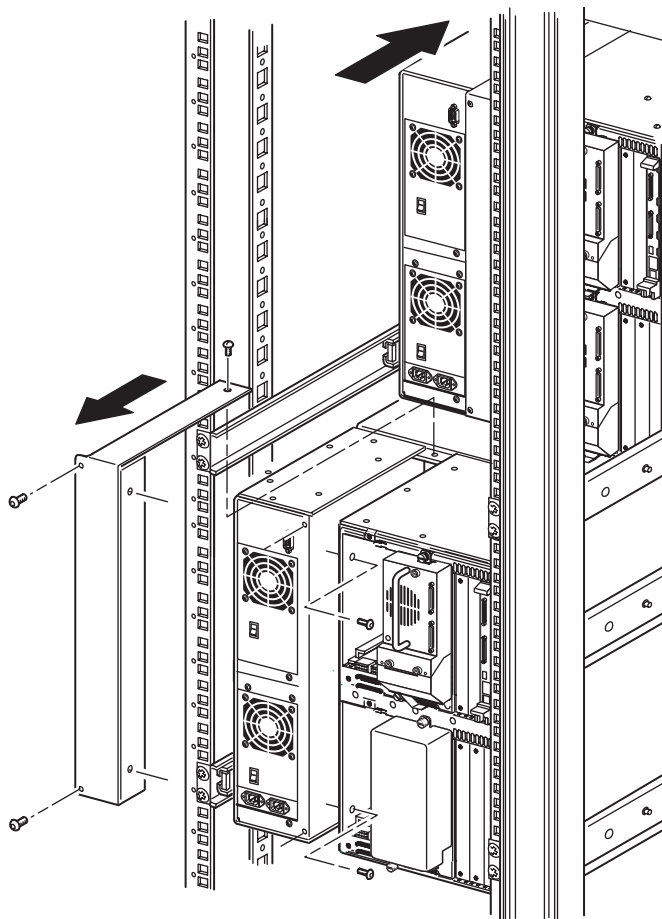


Figure 12 Removing a PTM cover plate (10U models)

Adding Extensions to a PTM Base Unit

To add extensions to a PTM base unit, you will need a clean, flat work area such as a table or work bench. The surface should be long enough to support the full length of the PTM base unit and all extensions.



NOTE: During this procedure, make sure you save all screws, the PTM base unit bottom bracket, and the belt tensioner ramp/idler pulley springs and associated hardware. These items must be reused when adding extensions.

1. Remove the bottom plate from the PTM base unit (see [Figure 13](#)).

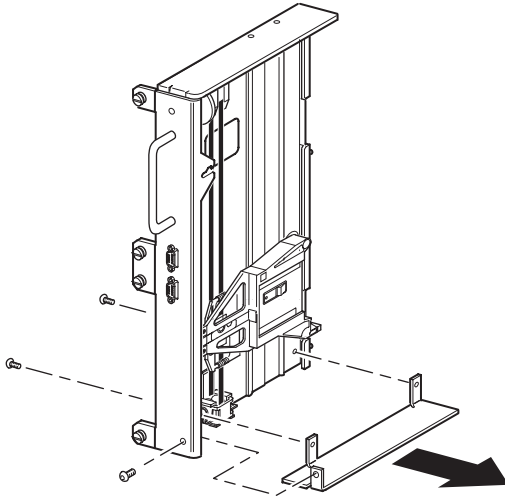


Figure 13 Removing the bottom plate from the PTM base unit

2. Slide the media elevator car to the top of the PTM base unit (see [Figure 14](#)). Note that the top of the PTM base unit has the drive motor on it.



NOTE: The media elevator car should now be positioned over the belt block bracket access cutout next to the PCB and drive motor.

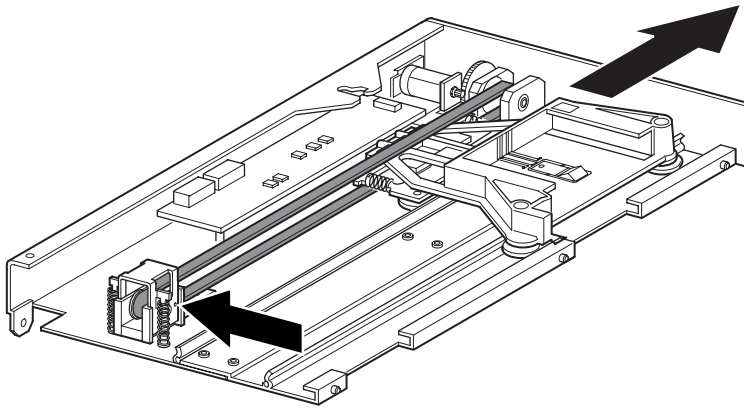


Figure 14 Media elevator car location

3. Insert a large paper clip through the holes on the idler pulley base to set the idler pulley tension to zero. (See [Figure 19](#) on page 28.)
4. Turn the PTM over to access to the belt block bracket access cutout (see [Figure 15](#) on page 25).



CAUTION: To prevent damage to the PTM media elevator car, it must be supported from underneath any time you are performing procedures on the belt block bracket assembly.

5. Remove one screw from each of the two belt block brackets. Loosen the other screw and move each belt block bracket to the side to gain access to the drive belt (see [Figure 15](#) on page 25).

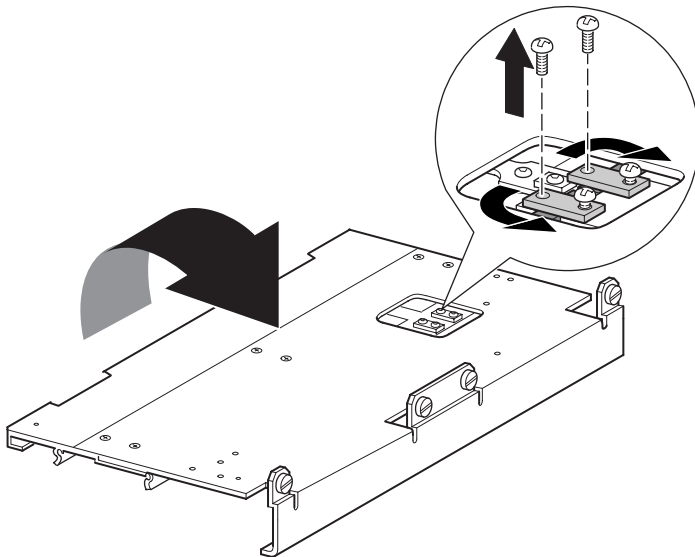


Figure 15 Belt block bracket access cutout

6. Turn the PTM base unit over and then remove the drive belt from the media elevator car, the belt tensioner ramp, and the idler pulley (see [Figure 5](#) on page 16).
7. Discard the belt.
8. Remove the belt tensioner ramp and idler pulley components as follows (see [Figure 16](#) on page 26):
 - a. Remove the two screws and springs from the belt tensioner ramp and idler pulley.
 - b. Remove the two screws that secure the belt tensioner ramp and idler pulley to the PTM base unit.
 - c. Remove the belt tensioner ramp and idler pulley.



NOTE: Retain the belt tensioner ramp/idler pulley springs and associated hardware for use in the subsequent installation steps. To avoid misplacing this hardware you can use [step 12](#) and [step 13](#) to install it on the last extension at this time, if desired.

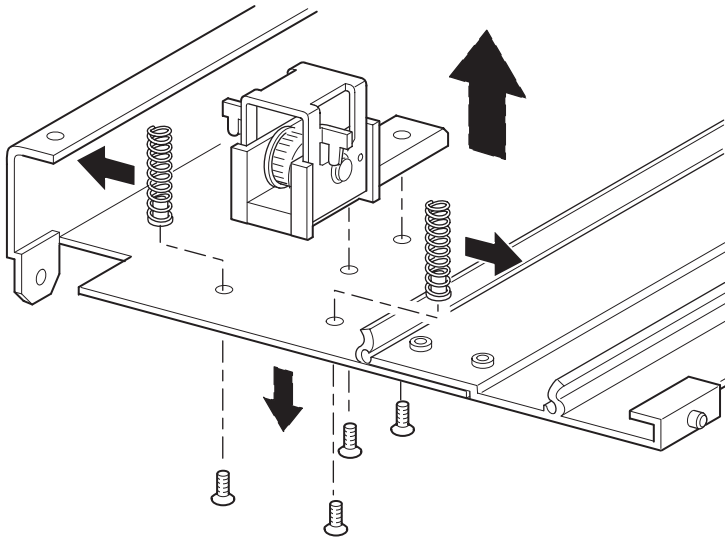


Figure 16 Removing the belt tensioner ramp and idler pulley

9. Mount a 5U or 10U extension as follows (see [Figure 17](#)):
 - a. Insert the alignment pins of the extension into the corresponding slots at the bottom of the PTM base unit.
 - b. Align the pins of the two narrow tie bars with the holes in the extension and PTM base unit (see [Figure 18](#)) and then attach them using four mounting screws (two screws for each narrow tie bar).

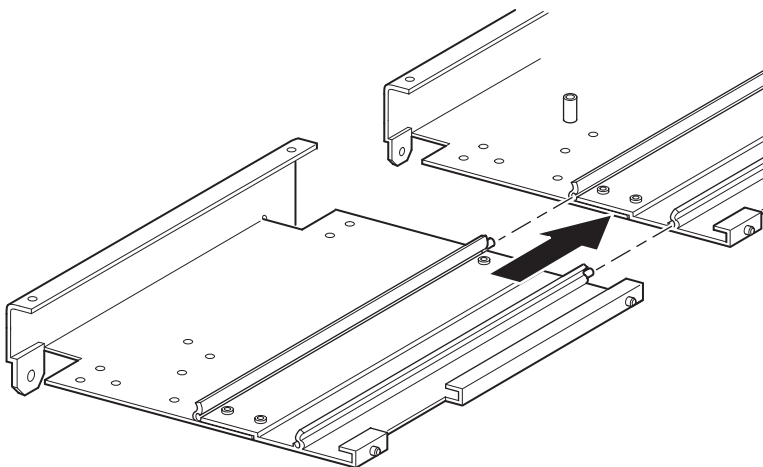


Figure 17 Mounting a 5U or 10U extension

- c. Attach the large tie bar (beveled edge to the inside corner of the PTM base unit and extension) using four mounting screws (see [Figure 18](#)).

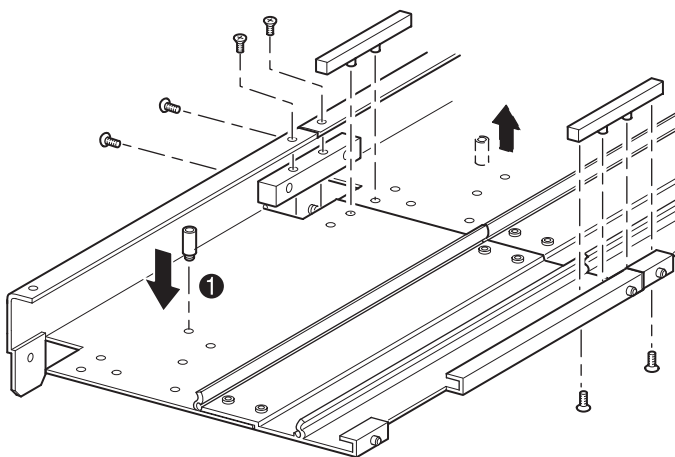


Figure 18 Installing tie bars

10. Repeat [step 9](#) for each extension.
11. Remove the bottom stop standoff from the PTM base unit and then attach it to the corresponding mounting hole (see [Figure 18](#)) in the last unit of the extended PTM.
12. Secure the belt tensioner ramp and idler pulley to the extension using the two previously removed screws (see [Figure 16](#) on page 26).
13. Secure the belt tensioner ramp and idler pulley springs using the two previously removed screws (see [Figure 16](#) on page 26).

Installing a Longer Belt to an Extended PTM

To install an extended belt:

1. On the extension belt tensioner ramp and idler pulley base, compress the springs until the holes in the tensioner ramp are aligned with the holes in the base of the tensioner.
2. Insert a large paper clip through the holes. This sets the idler pulley to the zero position (see [Figure 19](#)).

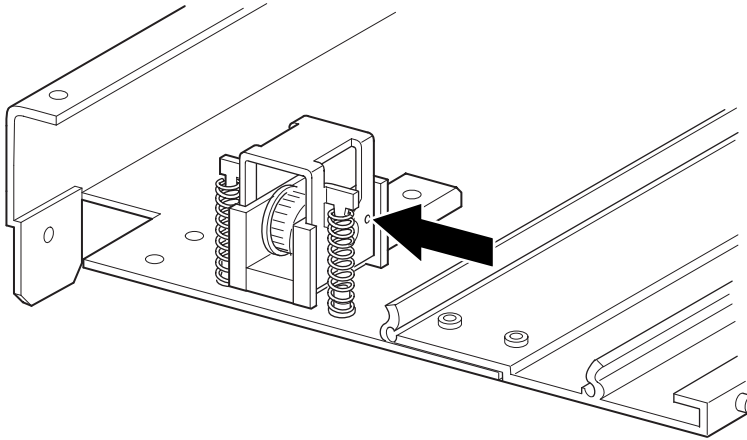


Figure 19 Tensioner ramp/idler pulley zero point

3. Thread the timing belt through the top of the belt tensioner ramp and idler pulley and then through the motor drive pulley. Make sure the belt teeth engage both pulleys (see [Figure 20](#) and [Figure 21](#) on page 29).
4. Position the media elevator car over the belt block access cutout (see [Figure 14](#) on page 25).
5. Position the ends of the timing belt under the media elevator car at the midpoint of the belt block access cutout.
6. Turn over the PTM.

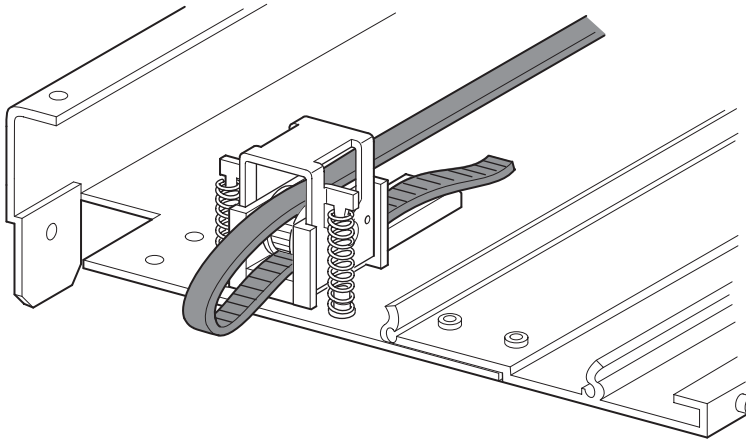


Figure 20 Installing the timing belt on the extension

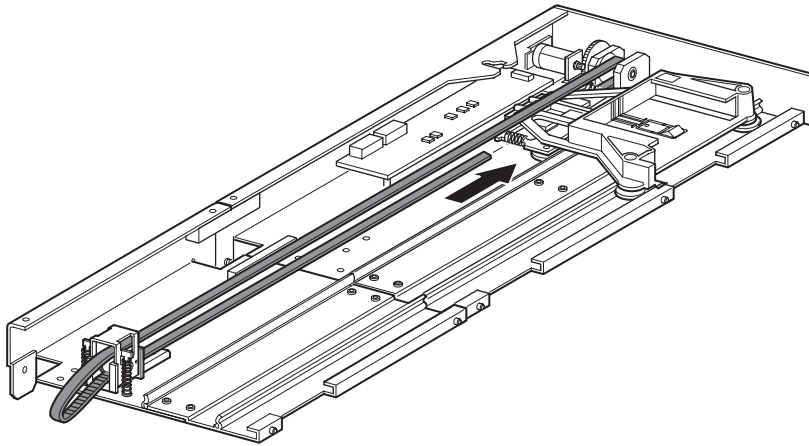


Figure 21 Installing the timing belt



CAUTION: To prevent damage to the PTM media elevator car it must be supported from underneath any time you are performing procedures on the belt block bracket assembly.

7. Place the timing belt ends on the belt block (see [Figure 22](#)).
8. Use diagonal cutting pliers to cut the drive belt. If the belt was sized properly, a small space between the belt ends should be visible.
9. Secure the timing belt with the two belt brackets and four retaining screws.

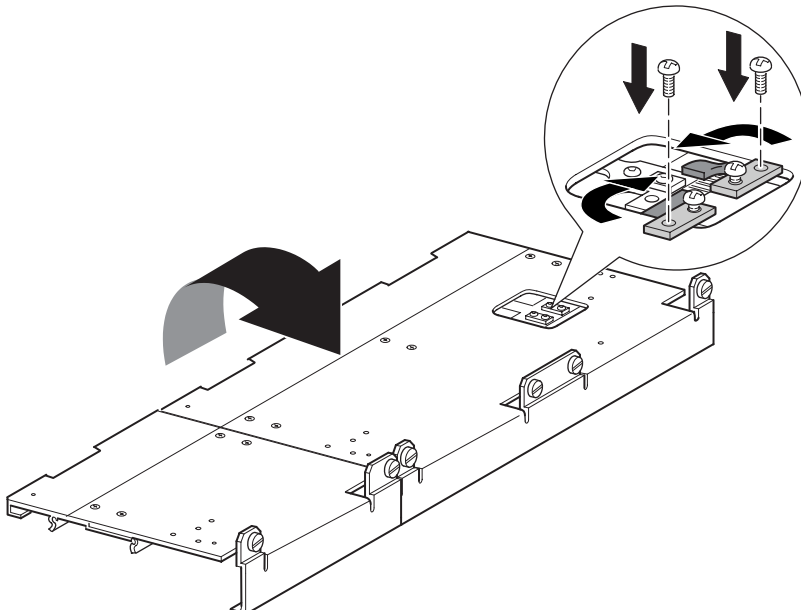


Figure 22 Timing belt at the belt block



NOTE: Secure the timing belt at the top first.

10. Remove the previously inserted large paper clip to automatically set initial belt tension.
11. Install the bottom plate that was previously removed from the PTM base unit using the previously removed retaining screws (see [Figure 23](#)).

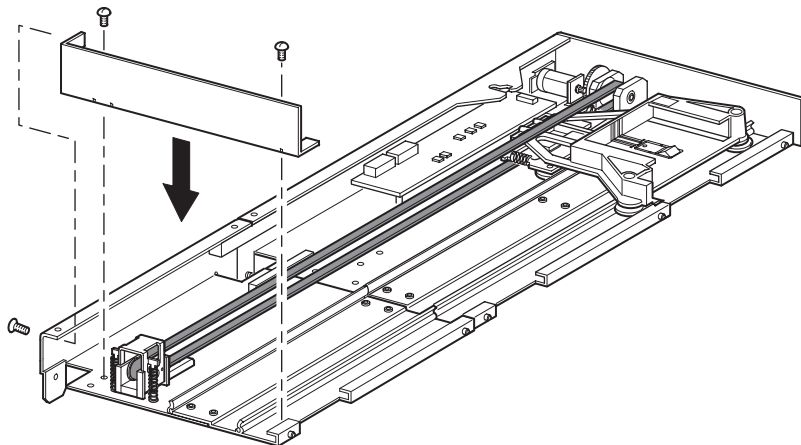


Figure 23 Installing the bottom plate

Installing the Extended PTM

To install the extended PTM:

1. Use the handle while supporting the PTM base unit from the bottom (see [Figure 9](#) on page 20).
2. Carefully insert the extended PTM into the top library making sure the top pins are fully engaged.
3. Using the PTM extension thumbscrews, secure the extended PTM to the top (master) library.



NOTE: If the lower pins are difficult to align to the bottom (slave) libraries, push the slave libraries slightly forward. Afterwards, engage each one by pulling them (one at a time) toward the extended PTM and then tighten the appropriate thumbscrews.



NOTE: On 10U libraries, the middle holes on the unit are not threaded and are not intended to engage the thumbscrews. The top and bottom thumbscrews secure the PTM extension to the library.

4. Using the PTM extension thumbscrews, secure the extended PTM to the remaining libraries (in sequence) for the multi-unit library configuration.



NOTE: If you still cannot align a bottom (slave) library to the extended PTM, slightly loosen the rear rail bracket screws for that library, reposition it, and then secure it to the extended PTM. Afterwards, re-tighten all rear rail bracket screws.

5. If required, install any previously removed drive assemblies and covers.
6. If necessary, tighten the thumbscrews at the front of the unit.
7. You can now attach the data cables to the extended PTM. See the section on "[Cabling the PTM and LAN Hub](#)" on page 31.

Cabling the PTM and LAN Hub

This section describes how to connect the data cables to the PTM and LAN hub in a multi-unit library configuration (single master and slave).



CAUTION: Do not apply power to any library until cabling is complete. Attempting to connect or disconnect a PTM to a library that has power applied can damage the library and the PTM PCB.

After connecting all the appropriate data cables, see "[Configuring the PTM](#)" on page 35 for detailed information about configuring the PTM using the GUI touch screen.

Multi-Unit Library Configuration (Single Master and Slave)

Figure 24 on page 32 shows how to connect a multi-unit library configuration using a single master and a slave library configuration.



NOTE: All libraries must be powered off.



NOTE: Refer to the *HP StorageWorks MSL6000 Series Tape Library User Guide* for information on connecting SCSI cables and SCSI terminators to fit your specific needs and for additional multi-unit library and SCSI configuration information.

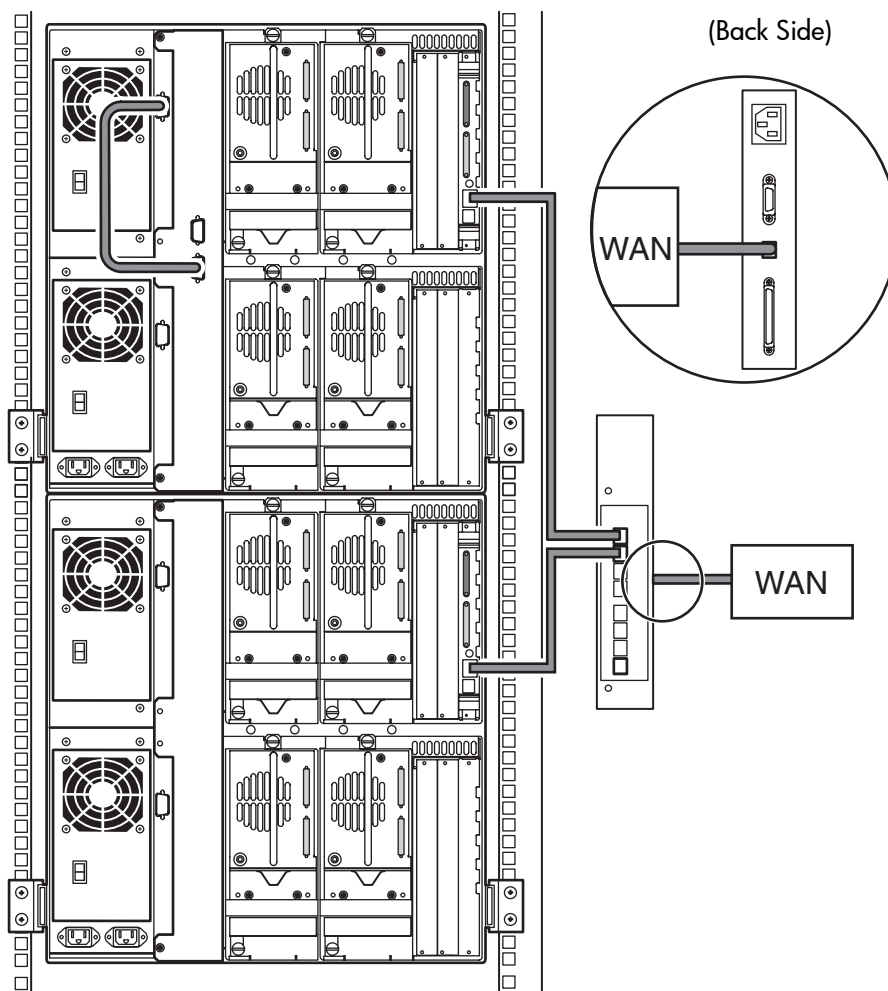


Figure 24 10U multi-unit library configuration (single master and slave)



NOTE: Additional slaves require an extended PTM system. See "[Adding Extensions to a PTM Base Unit](#)" on page 23, "[Installing a Longer Belt to an Extended PTM](#)" on page 28, and "[Installing the Extended PTM](#)" on page 31.

3 Configuring the PTM

This chapter describes how to configure a Pass-Through Mechanism (PTM) for an HP StorageWorks MSL6000 Series tape library. Sections in this chapter include:

- [Preparing for Configuration](#), page 35
- [Configuring the Master Library](#), page 35
- [Configuring the Slave Libraries](#), page 39
- [Verifying the Configuration](#), page 39
- [Converting a Multi-Unit Library Configuration to Standalone Configuration](#), page 40
- [Verifying the Firmware Level](#), page 40
- [Updating Firmware](#), page 41

Preparing for Configuration

After the Pass-Through Mechanism (PTM) has been successfully installed, the libraries must be configured to operate correctly as a multi-unit library configuration.



NOTE: The master library has a fully functional GUI. Slave libraries only have partial GUI capabilities.

Before configuring the libraries:

1. Make sure the libraries are connected as described in the *HP StorageWorks MSL6000 Series Tape Library User Guide*.
2. Power on the LAN hub.
3. Turn the libraries on and wait until the Power-On Self Test (POST) completes and the HP initialization or home screen appears on the display. Refer to the *HP StorageWorks MSL6000 Series Tape Library User Guide* for detailed instructions on power-up procedures.

Configuring the Master Library

1. Using the Graphical User Interface (GUI) touch screen on the master library, touch the **Menu** button from the Status screen (see [Figure 25](#)). Refer to the *HP StorageWorks MSL6000 Series Tape Library User Guide* for instructions on how to operate the GUI touch screen.



NOTE: Libraries using 2.xx firmware that have previously been configured as slaves must be changed to a standalone first, then configured as a master, or updated to the latest library firmware.

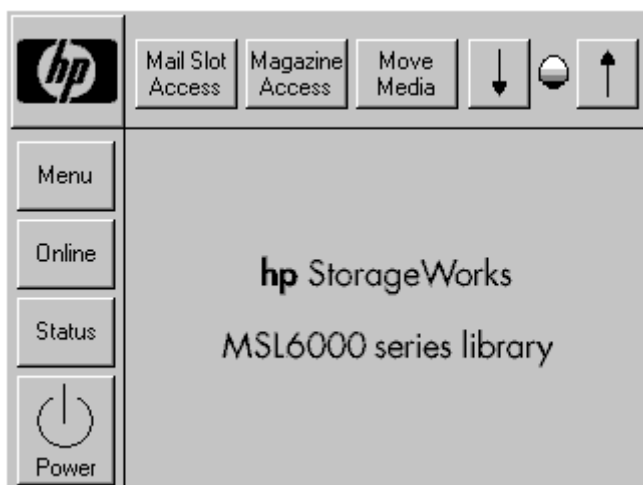


Figure 25 Library home screen (MSL6000 shown)

2. Touch the **Library** button from the **Edit Options** area of the GUI (see [Figure 26](#)).

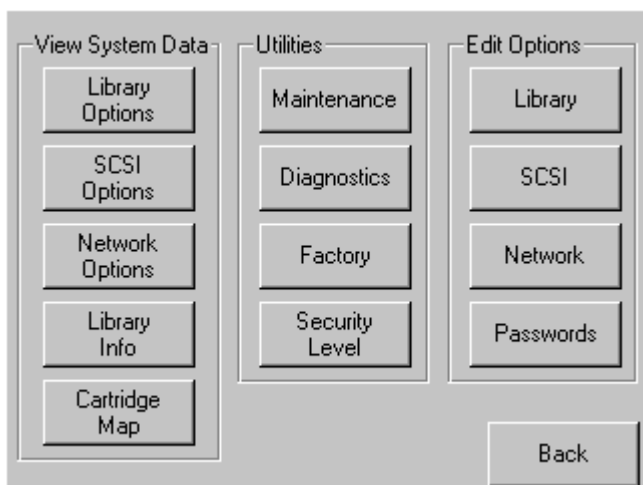


Figure 26 Menu screen



NOTE: The library status LED indicator flashes green to indicate that a change is being made on the GUI that interrupts the current library operation.

3. Enter the appropriate Service password and then touch the **Validate** button. Refer to the *HP StorageWorks MSL 6000 Series Tape Library User Guide* for additional information on setting passwords.
4. Press the down arrow (▼) until the **Module Configuration** menu option appears on the bottom of the display (see [Figure 27](#)).



NOTE: You can move to the next sequential **Library** options screen by touching the down arrow (▼). To return to the previous **Library** options screen, touch the up arrow (▲) or **Back** button to return to the **Menu** screen.

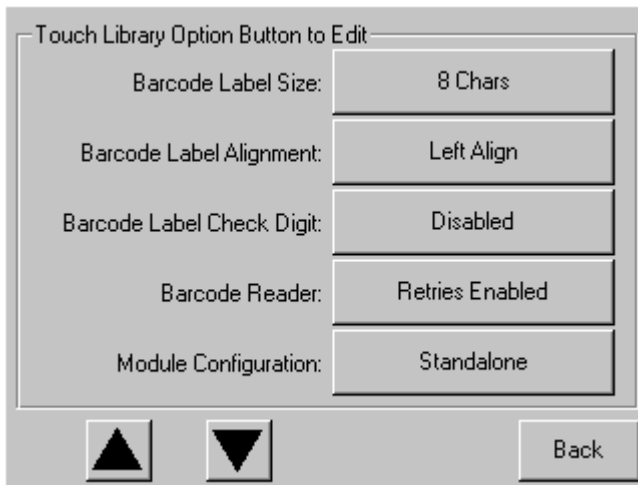


Figure 27 Module Configuration select screen

5. Touch the button next to the **Module Configuration** menu option and then touch the **Master** button (see Figure 28).

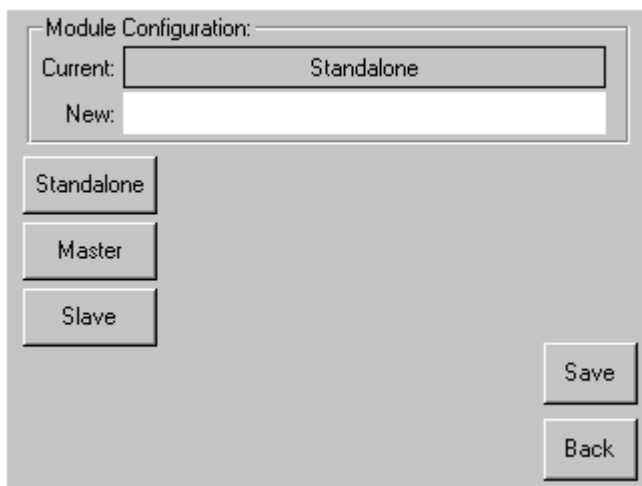


Figure 28 Module Configuration screen

6. Touch the **Save** button to confirm your request.
7. Touch **OK** to save the new option. Afterwards, the library will automatically reboot and be configured for the new option (see Figure 29).



NOTE: After the library reboots, the library status LED indicator lights solid green indicating that the library is now fully operational.

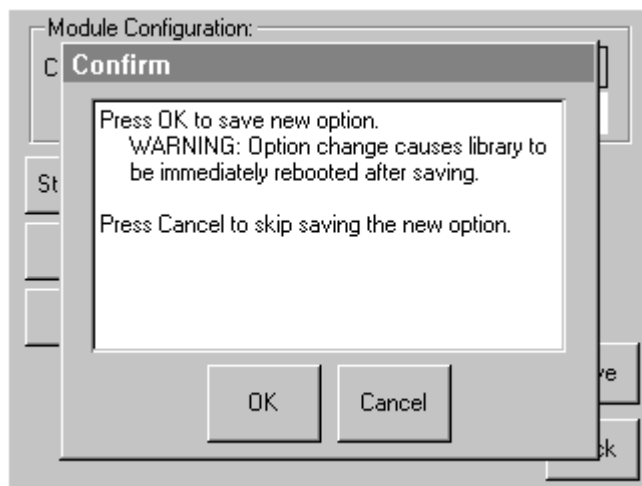


Figure 29 Module Configuration confirmation screen

Configuring the Slave Libraries

To configure the remaining libraries as slaves:

1. Using the GUI touch screen on a standalone library in a rack enclosure, touch the **Menu** button from the Status screen (see [Figure 25](#) on page 36).
2. Touch the **Library** button from the **Edit Options** area of the GUI (see [Figure 26](#) on page 36).



NOTE: The library status LED indicator flashes green to indicate that a change is being made on the GUI that interrupts the current library operation.

3. Enter the appropriate Service password and then touch the **Validate** button. Refer to the *HP StorageWorks MSL6000 Series Tape Library User Guide* for additional information on setting passwords.
4. Touch the down arrow (▼) until the **Module Configuration** menu option appears on the bottom of the display (see [Figure 27](#) on page 37).



NOTE: You can move to the next sequential **Library** options screen by touching the down arrow (▼). To return to the previous **Library** options screen, touch the up arrow (▲) or **Back** button to return to the **Menu** screen.

5. Touch the button next to the **Module Configuration** menu option and then touch the **Slave** button (see [Figure 28](#) on page 38).
6. Touch the **Save** button to confirm your request.
7. Touch **OK** to save the new option. Afterwards, the library will automatically reboot and be configured for the new option (see [Figure 29](#) on page 38).



NOTE: After the library reboots, the library status LED indicator lights solid green indicating that the library is now fully operational.

8. Repeat this procedure to configure the remaining libraries as slaves.

The multi-unit library configuration is now ready to verify firmware.

Verifying the Configuration

To verify the configuration, run the cartridge cycle diagnostic:

1. Load several cartridges into the master unit.
2. Touch **Menu** on the master GUI **Status** Screen.
3. Touch **Diagnostics** (in the **Utilities** area).
4. Enter the appropriate password, if necessary, and validate.

5. Touch **Cartridge Cycle**. The **Cartridge Cycle** diagnostic screen is displayed.

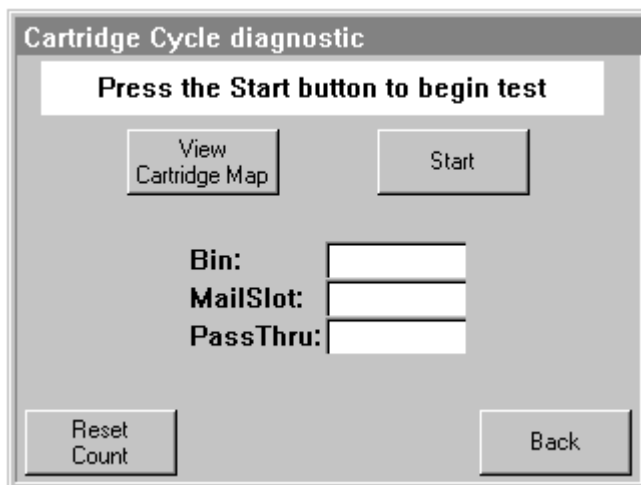


Figure 30 Cartridge Cycle diagnostic screen

6. Touch **Start** to begin testing. The message "**Test is running**" will display.
7. Touch **Stop** to end the diagnostic.

Converting a Multi-Unit Library Configuration to Standalone Configuration

If you are converting a multi-unit library configuration to a standalone configuration, it is beneficial to do so in the following order:

1. Convert the slave unit(s) to standalone.
2. Convert the master unit to standalone.
3. Power off all libraries.



CAUTION: All libraries must be powered off before disconnecting the motor cable. Failure to do so will damage the library and PTM.

4. Remove the PTM motor cable.

Verifying the Firmware Level

The recommended minimum firmware level required for a multi-unit library configuration is 3.19 for DLT only libraries, or 4.04 for LTO Ultrium-compatible libraries.

To verify the firmware level of the master:

1. Apply power to the library:
 - a. Connect each supplied power cord to each power supply receptacle.

- b. Toggle each power switch on.
- c. Press anywhere on the GUI touch screen to activate the display and power on the library.



NOTE: Refer to the *HP StorageWorks MSL6000 Series Tape Library User Guide* for additional information on applying power to a library.

2. After POST completes, touch **Menu**.
3. Touch **Library Info** in the **View System Data** area. The firmware revision appears in the **Miscellaneous Library Info** screen.
4. If required, update the master to the correct firmware level.



NOTE: After the master is updated, any attached slaves are then automatically updated.

Updating Firmware



NOTE: Before upgrading firmware, be sure to generate a support ticket using HP StorageWorks Library & Tape Tools (see page 43). The resulting information may be helpful to your service provider in resolving potential issues that may have prompted the firmware upgrade.

MSL Series tape libraries can be flashed using HP StorageWorks Library and Tape Tools (L&TT), the Remote Management Interface, or the MSLUtil.exe diagnostic utility and diagnostic cable.

Checking the Firmware Revision

Before downloading new firmware, check your current firmware revisions, and compare them to the latest available revisions at <http://www.hp.com/support>, or through L&TT. You can check your current firmware revisions from the GUI touch screen. Select **Menu > View System Data > Library Info**.

Using the Remote Management Interface

To update the firmware using the Remote Management Interface, you need a LAN connection to the library, or an Ethernet connection to the World Wide Web.

1. Login to the Remote Management Interface.



NOTE: See the *HP StorageWorks MSL6000 Series Tape Library User Guide* for additional information on setting up and using the Remote Management Interface.

2. Click on **Functions**.

3. Scroll down to **Library Flash Operation**.

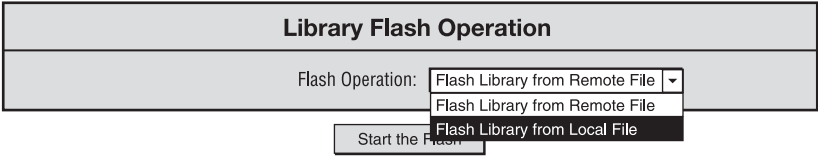


Figure 31 Updating firmware using the Remote Management Interface

4. Select **Flash Library from Remote File** or **Flash Library from Local File** (see Figure 31).

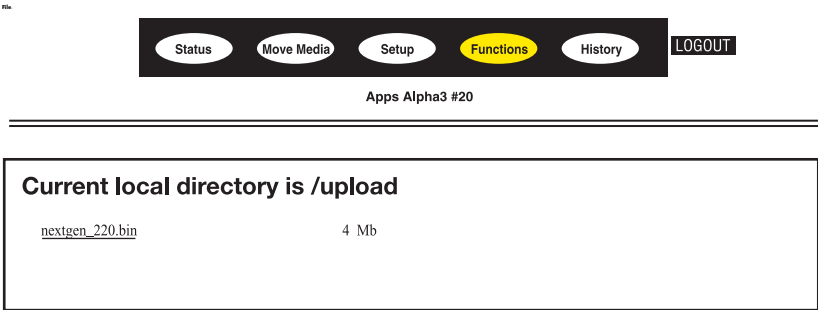


Figure 32 Copying firmware using the Remote Management Interface



NOTE: If you select **Flash Library from Local File**, the *.bin file must be copied from <ftp://ftp.hp.com/pub/products/storageworks/msl> to the /upload directory, which is located on the library at the IP Address/upload. The level 1 password may be required to perform this procedure.

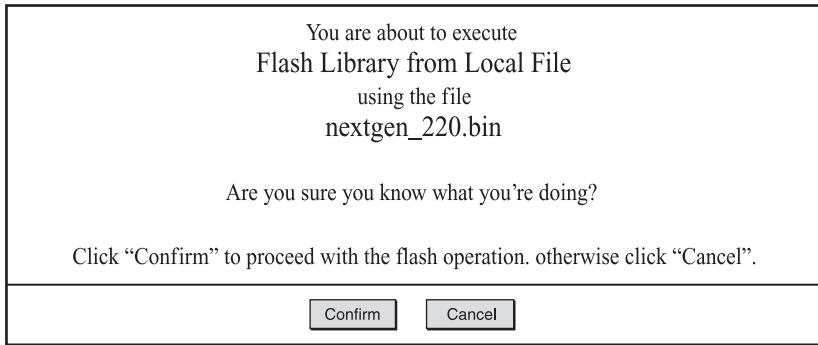


Figure 33 Confirming the Flash operation using the Remote Management Interface

5. Click **Confirm** to start the Flash operation. The library firmware automatically updates.

6. The library will reboot. Verify that the firmware level has been updated successfully by selecting the **Library Info** button from the **View System Data** area of the GUI to view the **Firmware Revision**.

Using HP StorageWorks Library & Tape Tools

HP StorageWorks Library & Tape Tools may already be installed on your host. If not, you can download it from <http://www.hp.com/support/tapetools>.

Online help and instructions are included with the utility.

Using a Serial Connection

To update the firmware using the *MSLUtil.exe* you will need:

- *MSLUtil.exe* and the proper version of firmware, available for download from the HP website at <http://www.hp.com/support>.
- Cable assembly, serial RJ11 to DB9
- PC with available serial port

Firmware Flashing Procedure

1. Install the *MSLUtil.exe* on the PC.
2. Copy the firmware image (*.bin) into the same directory that the *MSLUtil.exe* was installed.
3. Connect the library diagnostic port to the PC using the supplied cable assembly.
4. Start the *MSLUtil.exe*.
5. Click **Connect**, select the PC serial port that the cable assembly is connected to, and then click **OK**.
6. Click **Download > Browse**. Navigate to the directory with the firmware image *.bin.
7. Click **OK**. The library firmware automatically updates.



NOTE: If the flash process does not complete, select a lower baud rate option, available under the **Connect** window, and try again.

8. The library will reboot. Verify that the firmware level has been updated successfully by selecting the **Library Info** button from the **View System Data** area of the GUI to view the **Firmware Revision**.

4 Electrostatic Discharge

To prevent damage to the system, be aware of the precautions you need to follow when setting up the system or handling parts. A discharge of static electricity from a finger or other conductor can damage system boards or other static-sensitive devices. This type of damage can reduce the life expectancy of the device.

To prevent electrostatic damage, observe the following precautions:

- Avoid hand contact by transporting and storing products in static-safe containers.
- Keep electrostatic-sensitive parts in their containers until they arrive at static-free workstations.
- Place parts on a grounded surface before removing them from their containers.
- Avoid touching pins, leads, or circuitry.
- Always be properly grounded when touching a static-sensitive component or assembly.

Grounding Methods

There are several methods for grounding. Use one or more of the following methods when handling or installing electrostatic-sensitive parts:

- Use a wrist strap connected by a ground cord to a grounded workstation or computer chassis. Wrist straps are flexible straps with a minimum of 1 megohm \pm 10 percent resistance in the ground cords. To provide proper ground, wear the strap snug against the skin.
- Use heel straps, toe straps, or boot straps at standing workstations. Wear the straps on both feet when standing on conductive floors or dissipating floor mats.
- Use conductive field service tools.
- Use a portable field service kit with a folding static-dissipating work mat.

If you do not have any of the suggested equipment for proper grounding, have an authorized reseller install the part.



NOTE: For more information on static electricity, or for assistance with product installation, contact your HP authorized reseller.

Index

- A**
 - audience 5
 - authorized reseller, HP 6
- B**
 - base unit description 16
 - belt block 30
 - belt tensioner ramp and idler pulley removal 26
 - bottom plate 30
 - bottom plate removal 24
- C**
 - cabling the PTM and LAN hub 31
 - components
 - extender upgrade kits 9
 - PTM base unit 16
 - PTM kit 9
 - configuration
 - converting multi-unit to standalone 40
 - master library 35
 - multi-unit library 32
 - slave libraries 39
 - verifying 39
 - conventions
 - document 5
 - text symbols 5
- D**
 - diagnostics
 - library and tape tools 43
 - document
 - conventions 5
 - documentation, HP web site 5
 - drive belt removal 26
- E**
 - electrostatic discharge 45
 - extended belt
 - installing 28
 - extended PTM installation 31
 - extensions
 - adding 23
 - attaching 27
 - available sizes 11
 - determining type and number 12
 - tie bar 27
- F**
 - firmware
 - level
 - recommended 40
 - verifying 40
 - updating 41
 - upgrade requirements 43
- G**
 - grounding methods 45
- H**
 - help, obtaining 7
 - HP
 - authorized reseller 6
 - storage web site 7
 - Subscriber's choice web site 6
- I**
 - illustration
 - accessing the drive shoe assembly 18
 - belt block bracket access cutout 25
 - belt tensioner ramp and idler pulley removal 26
 - bottom plate removal 24
 - installing the bottom plate 30
 - installing the LAN hub 13, 14
 - installing the PTM base unit 20, 21, 22, 23
 - installing the timing belt 29
 - installing tie bars 27
 - library installation 17
 - library status screen 36
 - media elevator car location 25
 - menu screen 36
 - module configuration confirmation screen 38
 - module configuration screen 38

- module configuration select screen [37](#)
- mounting a 5U or 10U extension [27](#)
- multi-unit library configuration (single master and slave) [32](#)
- removing the PTM cover plate [19](#)
- tensioner ramp/idler pulley zero point [28](#)
- timing belt at the belt block [30](#)

installation

- bottom plate [30](#)
- compatibility with TL and SSL series [9](#)
- extended belt [28](#)
- extended PTM [31](#)
- LAN hub [13](#)
- library positioning [12](#)
- overview [9](#)
- planning [11](#)
- preparing [9](#)
- single PTM base unit [16](#)
- variations [11](#)

L

LAN hub

- cabling [31](#)
- installing [13](#)

libraries

- installation positioning [12](#)

library and tape tools [43](#)

M

master library

- configuration [35](#)
- configuring [35](#)

P

pass-through mechanism [9](#)

installing

- preparation [9](#)
- presteps [9](#)

preparing for installation [9](#)

PTM

- cabling [31](#)
- components [9](#)
- cover plate
 - removing [18](#), [22](#)

PTM base unit

- adding extensions [23](#)

installation [16](#)

R

removal

- blank panel [17](#)
- drive shoe assembly [17](#)
- PTM cover plate [18](#), [22](#)

required tools [10](#)

S

screen

- library status [36](#)
- menu [36](#)
- module configuration [38](#)
- module configuration confirmation [38](#)
- module configuration select [37](#)

Subscriber's choice, HP [6](#)

symbols in text [5](#)

T

text symbols [5](#)

timing belt installation [29](#)

tools [10](#)

W

web sites

- HP documentation [5](#)
- HP storage [7](#)
- HP Subscriber's choice [6](#)